

CRAFTMADE™

ASSEMBLY & INSTALLATION INSTRUCTIONS FOR #52061

Please read carefully and save these instructions, as you may need them at a later date.

CAUTION

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

ASSEMBLY AND INSTALLATION

1. At the center of the BACK PLATE (6) there are eight perforated slots. Knock out the set matches your OUTLET BOX (1).
2. Screw the FIXTURE SCREWS (2) into the BACK PLATE (6) and thread the HEX NUTS (9), as shown. Secure the position of the FIXTURE SCREWS (2) by tightening the HEX NUTS (9) against the BACK PLATE (6).
3. Carefully pass the power supply (10&11) wires and the SUPPLY GROUND WIRE (4) through the center hole of the BACK PLATE (6). Secure the BACK PLATE (6) to the OUTLET BOX (1) with MOUNTING SCREWS (7).
4. Attach the BLACK SUPPLY WIRE (10) to the SMOOTH (or BLACK) FIXTURE LEAD WIRE (12) by using the WIRE CONNECTOR (3). At the same manner, attach the WHITE SUPPLY WIRE (11) to the RIBBED (or WHITE) FIXTURE LEAD WIRE (13). Loop the FIXTURE GROUND WIRE (5) around the GROUND SCREW (8) of the BACK PLATE (6). (Note: Be sure to provide an extra 3" length of the FIXTURE GROUND WIRE (5) for connection to the SUPPLY GROUND WIRE (4).) Tighten the GROUND SCREW (8). Connect the remaining FIXTURE GROUND WIRE (5) to the SUPPLY GROUND WIRE (4) using a WIRE CONNECTOR (3). Place wiring and connections inside the OUTLET BOX (1).
5. Place the FIXTURE(14) onto the FIXTURE SCREWS (2), and secure it into place using the DECORATIVE NUTS(15) provided and RUBBER WASHER(17).

ASSEMBLY AND INSTALLATION (Continued)

6. Install one 60-watt max standard-base incandescent bulb (not included) or CFL/LED equivalent
7. Attach glass shades (15) to sockets and turn clockwise until it tighten.
8. To prevent moisture from entering the outlet box(1) and causing a short, use clear caulking(not include) to outline the outside of the fixture's back plate where it meets the wall, leaving a space at the bottom to allow moisture a means of escape.

